



TOP: STEPHEN SPINNA/BLAUPH

Last month, part one of this article explored the fundamentals of automotive dynamics, or handling. Among other things, we established the fact that the rear-engined car, with its rearward weight bias over the tractive wheels, has a fundamental advantage over the conventional front-engine, rear-drive configuration from almost every standpoint. This is especially true in high performance cars.

Just looking around, it would seem that automobile designers have been a little slow to utilize this inherent advantage, but you can read some history and maybe see why. The early experiments with rear-

WHAT MAKES CARS HANDLE?

PART II

BY JIM HALL
with David E. Davis, Jr.

engined cars were evidently pretty hairy, and if you look at the cars involved, it's understandable. Stirling Moss once said, "The poor roadworthiness of the 1934 Auto Union damned the rear-engine principle for twenty years".

Bad experiences with cars like the Auto Unions gave support to the popular misconception that the heavy end must be forward for stability—in anything. Various examples are cited to "prove" that the weight belongs in the front—using the arrow, for instance—but it ain't so. Both the cave man's arrow, with its great flint head, and the modern version, with its light metal tip, owe

HANDLING CONTINUED

their directional stability to the rearward placement of the feathers; it doesn't really make any difference *where* the weight is.

Compare the modern jet plane, with its wings far back on the fuselage, to a World War I pursuit plane, where the wings and the engine and all the mass were concentrated right in the front. The truth is that weight distribution, by itself, has nothing to do with good or bad, safe or unsafe vehicle behavior—whether we're talking about arrows, or air-planes, or automobiles.

These, and similar misconceptions, and the human being's innate resistance to change, may explain why so few people have been willing to accept the rear-engined car. The significance of these prejudices is pretty apparent in the reluctance of the old timers at Indianapolis to accept the "funny little cars".

What are these advantages? Well, let's examine a few. On acceleration, the initial predominance of weight on the rear-engined car's rear

wheels, plus the force transfer from front to rear, gives the rear tires extra friction force. This is essential to produce large tractive forces, plus side forces for tractional control. It's also true at very high speeds where the tractive forces increase due to air resistance.

For a race car, rearward weight bias is a plus in both performance and controllability. The average driver, in any passenger car, will probably never use these advantages on dry pavement. But when the road gets slippery from rain or snow, *every* driver has to operate at or near the limit of friction, and these advantages can make the difference between going or not going, and maintaining control or losing it.

Another advantage occurs in braking. Due to the transfer of vertical force from rear to front, a car with equal weight distribution, or with a slight forward weight bias, must do most of the braking with the front wheels. This puts a lot of energy into the front brakes in the

form of heat, and they'll get plenty hot on a series of hard stops from high speeds. At the same time, however, the rear brakes aren't working too hard, and they have relatively little heat to dissipate.

A rearward weight bias tends to offset this vertical force transfer so that the braking effort can be more equally distributed between the front and the rear wheels. This puts less heat into the front brakes and more into the rear, resulting in more uniform brake temperatures and faster dissipation of heat by the whole system.

Structural problems are simplified with the rear-engined car. Forward visibility is far better. The rear-engined car lends itself to more efficient aerodynamic shape. Noise and cockpit temperature problems are also substantially reduced.

But let's get back to handling. *If there weren't any tire slip angles, the advantages of rear weight bias could be achieved with no further effort.* However, since slip angles

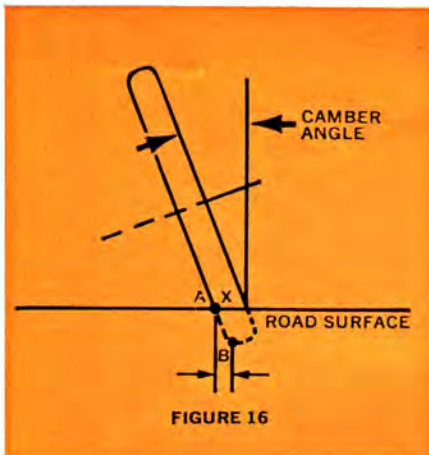


FIGURE 16

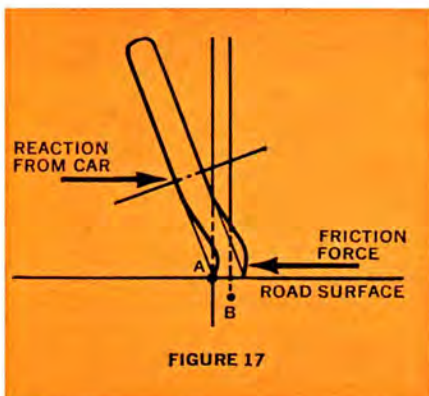


FIGURE 17

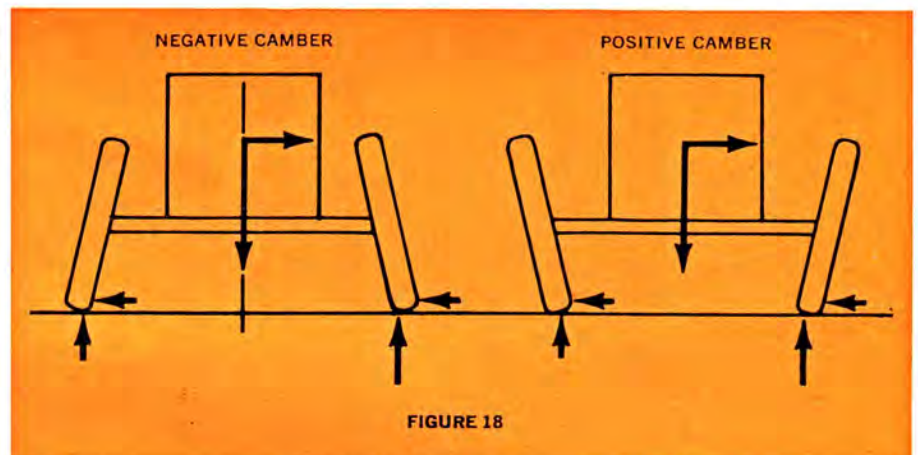


FIGURE 18

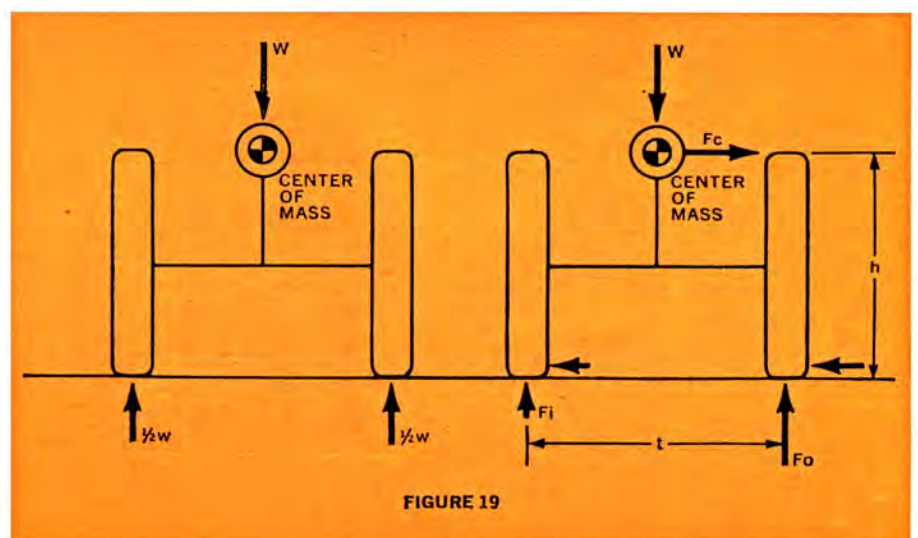


FIGURE 19

can't be completely eliminated, we have to consider tires, roll steer effects, and lateral dynamic force distribution—the three ways that we have to equate slip angles or to compensate for the differences that occur between front and rear.

First, tires—the effects of the difference between front and rear slip angles can be minimized by making those slip angles as small as possible. Such factors as large tire sections, wide rims, optimum tire pressures, carcass construction, tread, and rubber compound, all contribute to the reduction of slip angles.

Also, front and rear slip angles can be equated, or “balanced”, by putting tires with greater cornering ability on the heavy end of the car. This can also be achieved by higher pressures, wider rims, et cetera.

Roll steer effects are self-steering effects, caused by the roll of the body due to centrifugal force. “Any” degree of roll-steer may be designed into the front or rear suspension, or both. Roll steer doesn't change the

slip angles, but moves the wheels to compensate for them. There are two forms of roll steer effects: *Toe change*, that is, a change in the wheel's direction of travel, and, *camber change*, a change in the angle between the wheel and the road surface.

The third way to equate, or “balance”, slip angle differences between the front and the rear is *lateral dynamic force distribution*. In cornering, there's a transfer of vertical force from the inside wheels to the outside wheels. Since vertical force has a direct effect on tire slip angles, the distribution of this force transfer can be used to “balance” the slip angles.

Due to centrifugal force, the mass of the vehicle rolls on its suspension. This roll can be utilized to “steer” both front and rear wheels to compensate for oversteering or understeering slip angles. This can be done very effectively since the angular displacement of the body relative to the wheels depends on the cen-

trifugal force, as do the changes in slip angles. Therefore, the suspension geometry can be designed to steer the wheels in the compensating direction.

There are disadvantages, however, in that a high degree of roll itself is negative. With last month's discussion of tire characteristics, we've shown that slip angle changes occur with changes in vertical force. Since the body has mass, it takes some interval of time for it to roll through some increment of angle. During this period of time, the vertical forces are changing on the tires, so that the slip angles are changing, and the vehicle path is continuously changing as well. The result is a car that's sloppy and slow in response.

There's one point of view that roll has an advantage, in that the driver is less apt to get into a corner too fast due to his consciousness of the high degree of roll. I don't buy this view because he's already in trouble if he's gone in too fast, and I think

(Continued on page 98)

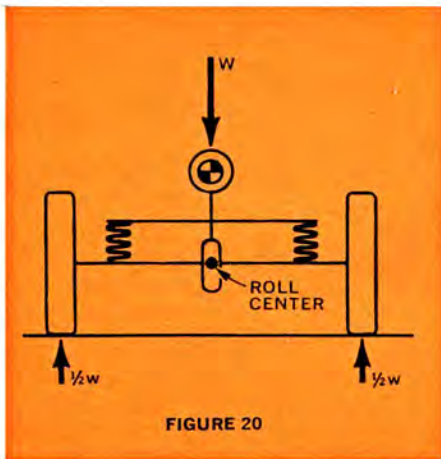


FIGURE 20

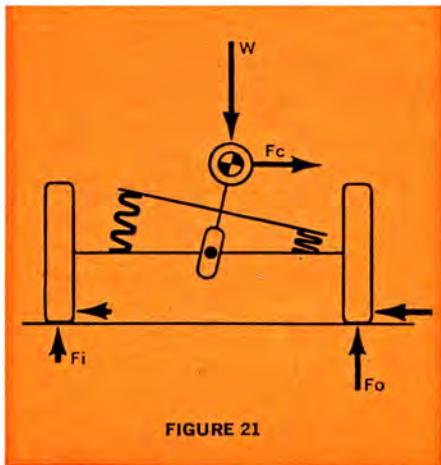


FIGURE 21

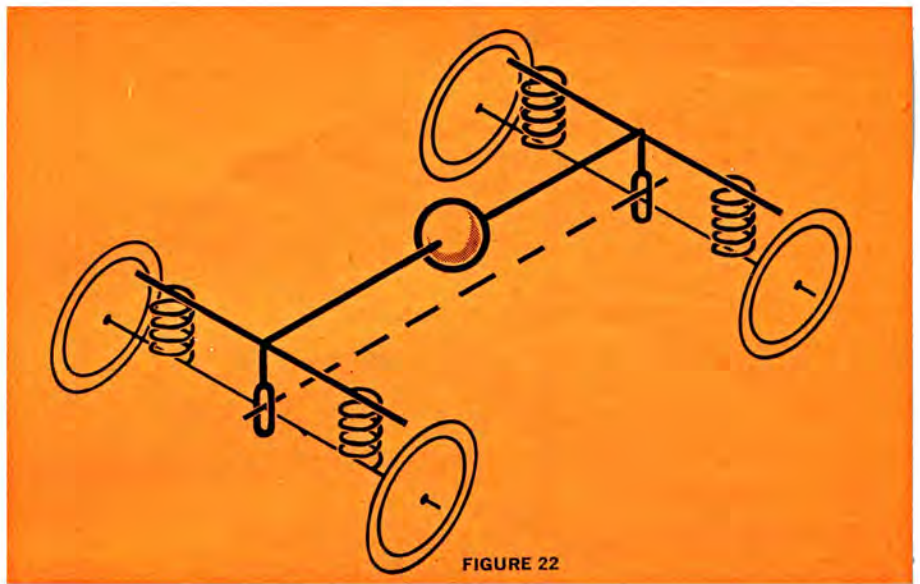


FIGURE 22

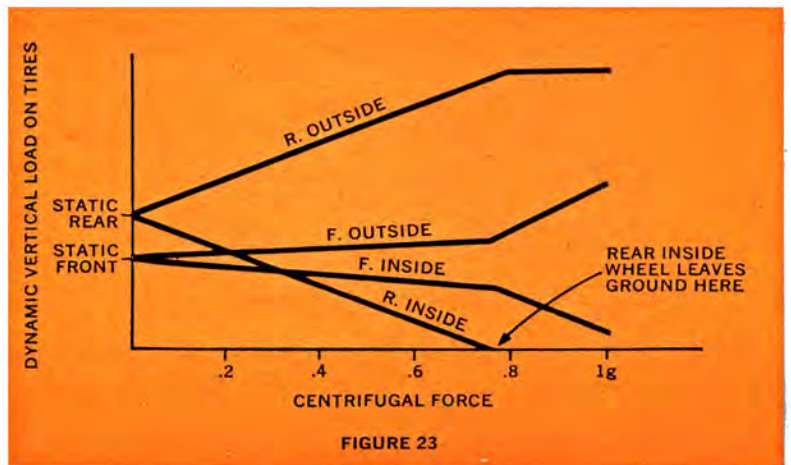


FIGURE 23

EUROPE by CAR



Write for
Complete
Information

Save up to 35% on
**CAR RENTAL &
PURCHASE IN
EUROPE**

| | |
|-------------|-------------|
| Volkswagen | Mercedes |
| Simca, Fiat | Rover Volvo |
| Citroen | Peugeot |
| Austin, DKW | Ford, BMW |
| Porsche | Renault |
| Jaguar | MG, Triumph |

I'm interested in _____
Name _____
Address _____
City _____ State _____ D-5

The Oldest & Largest
Overseas Delivery System
EUROPE BY CAR inc.

HANDLING (Cont. from P. 79)

he'd have a better chance to recover with the more responsive car.

In addition, it's pretty difficult to match roll steer to the non-linear tire characteristics you encounter at the very high lateral accelerations experienced in racing.

One of the considerations in suspension design is control of *camber*; that is, the angle of the plane of the wheel relative to the horizontal plane of the road. A wheel at such an angle exerts a side force, as you can see from the diagram in Figure 16. If the road surface were removed for a moment, it's clear that a particle of rubber (X) would move sideways with rotation from point A to B. However, if the road surface is in the position shown, the same particle (X) would be restrained by friction in a line through A. The wheel and force diagram would then look like Figure 17. This friction force produces a thrust on the vehicle to the left.

The wheel may be tilted either in-board or outboard (Figure 18), and

since the outside wheel has the greatest centrifugal force, it provides the maximum cornering power. Negative camber adds to the cornering power while positive camber subtracts.

Since neither negative nor positive camber can increase or decrease the ultimate side force of the tire, and since it does increase tire wear, it should be generally minimized. However, there must be deflection or compliance of the suspension and structure in any car. Therefore, some amount of static camber may be necessary so that the wheel will be as perpendicular as practical for uniform tire wear at high side forces.

Lateral dynamic "weight" transfer refers to the lateral transfer of the vertical forces at the tires, in cornering. The rate of force transfer at the front or rear, expressed in its percentage of the total, is called *roll couple distribution*.

There are two basic approaches to the control of roll couple distribution

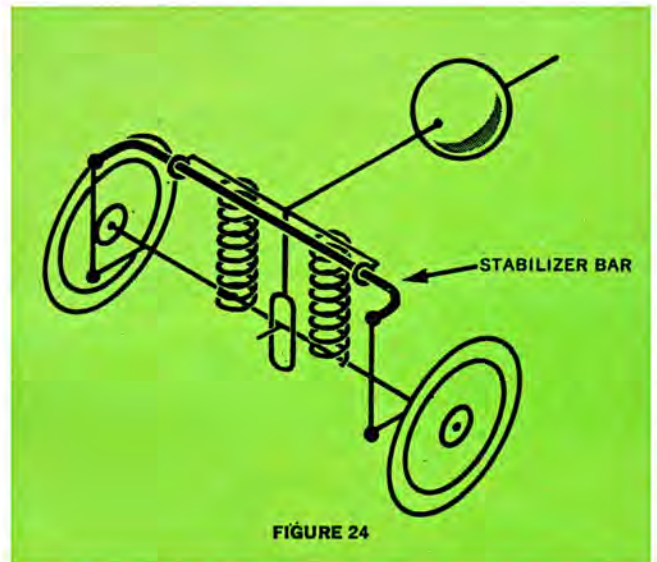


FIGURE 24

FREE! Engine Torque Specification BOOK

The proper use of a good torque wrench will help keep your car at peak performance



Torque control when servicing highly tuned racing mills or the fine engine in your sports car can actually improve performance. It can be the one thing you do that will keep your engine running when others fail.

P. A. STURTEVANT CO.

Please send me the following:



- Free Engine Torque Spec. Book.
- Car Protector Fender Cover with Bolt Torque Chart for U.S., Whitworth and Metric Sizes. This is the First Chart of its Kind. Satisfaction Guaranteed. Value

Name _____

Address _____

City _____ State _____

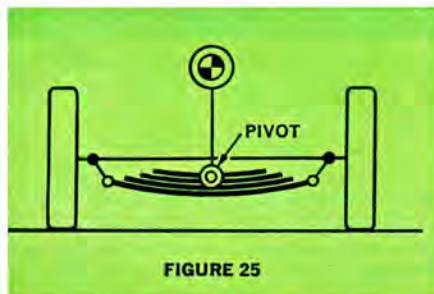


FIGURE 25

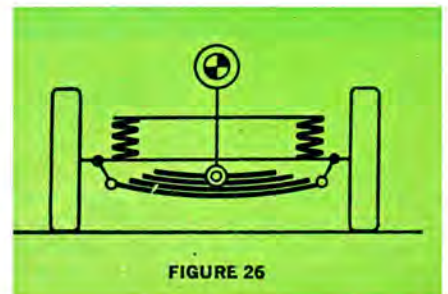


FIGURE 26

—spring rates in roll and relative roll center heights.

Figure 19 shows how a cornering car without springs transfers force in proportion to the ratio of the height of its "center of mass" and the track, or tread. The higher the center of mass, the larger the force transfer. In fact, this can be expressed with this equation: $F_0 - F_1 = F_c \times \frac{h}{t}$. Figure 20 shows the same condition if the mass of the vehicle is sprung. With minor exceptions, the force transfer is the same but the rate has changed, as in Figure 21.


If both ends of the vehicle are similarly sprung, the selective use of front and rear spring rates can give "any" desired rate of force transfer between the front and rear wheels.

Figure 22 shows very stiff rear springs and relatively soft front springs, as would be used to support a rear engine. As centrifugal force is generated, the rate of vertical force transfer will be higher in the back than the front. With the same tires, front and rear, the slip angle change

will be faster in the rear than front and the car will oversteer for two reasons: First, due to the predominance of rearward weight and, second, due to this weight, higher rate (stiffer) springs are required in the rear to give the desired ride control. The dynamic distribution of "weight", that is, vertical forces at the tire, would look something like Figure 23.

Since the "heavy" outside wheel provides the predominant cornering force, this car with typical tire characteristics, would oversteer. High rear tire pressure would reduce oversteer. Roll understeer would also reduce the effect of oversteer.

A more direct solution, however, would be to alter the springs to increase the relative stiffness in the front to achieve the desired relative rate of force transfer. They could be increased so that the rate of transfer would be the same, more, or less. However, this wouldn't be tolerable from the standpoint of ride.

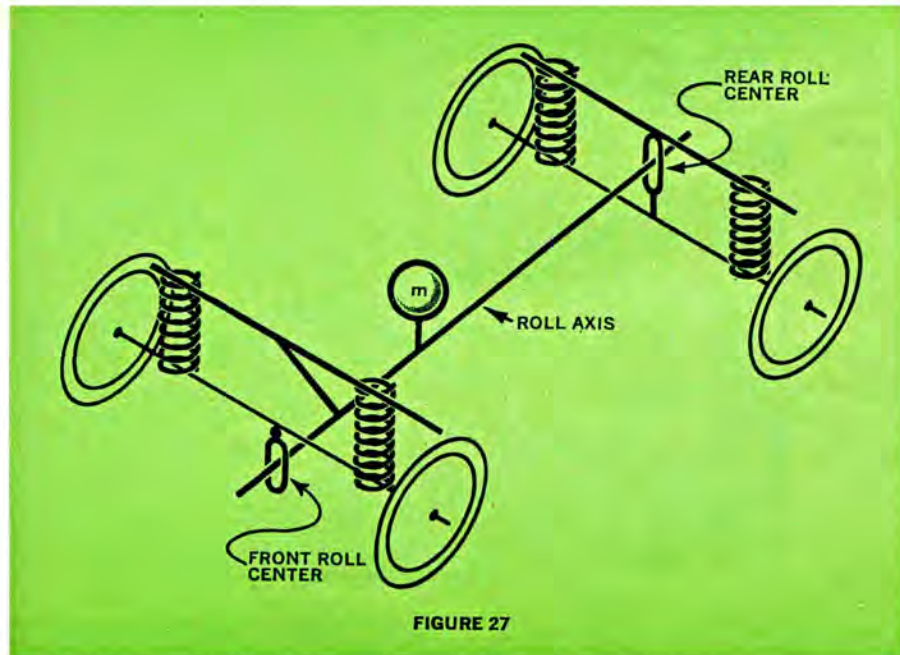

You can now bring home a complete color slide show (24, 40, or 72 perfectly exposed pictures) on just one roll of 35mm color film with the new fully automatic **FUJICA DRIVE** half size 35mm camera



It sets both correct shutter speed and lens opening all by itself. Advances film all by itself. It has a 5 element f/2.8 fast lens. Now at your camera dealer. Less than

Or write for booklet to:

FUJI PHOTO OPTICAL PRODUCTS, INC.
A subsidiary of
Ehrenreich Photo-Optical Industries, Inc.





NOW! COMPLETE FIBREGLASS SPORTS CAR BODIES AT LOWEST PRICES EVER!

I.S.I. HAS ELIMINATED DEALERS FROM ITS MARKETING STRUCTURE! IMMENSE SAVINGS FORMERLY AVAILABLE ONLY TO QUALIFIED DEALERS ARE NOW PASSED ON TO YOU, THE CUSTOMER, FACTORY DIRECT—F.O.B. Only I.S.I.'s central location and direct sale—no dealer marketing program can offer such great savings on all sizes and all styles. YET MAINTAIN THE HIGHEST STANDARDS OF QUALITY in CRAFTSMANSHIP AND MATERIALS! I.S.I. GUARANTEES it will stand up to every other on the market in surpassing strength and beauty of design! Sizes to fit right on virtually any car made! A BEAUTIFULLY MADE I.S.I. BODY IS WAITING TO TRANSFORM YOUR CAR! SEND TODAY FOR YOUR TECHNICAL, FULLY ILLUSTRATED COLOR BROCHURE AND COMPLETELY DETAILED CATALOG OF I.S.I. EQUIPMENT. Both are yours for \$1.00, refundable on minimum purchase. See how you can have a Ferrari-quality car on a Volkswagen budget! Get your next weekend project going for you now! DON'T WAIT! SEND THE ATTACHED COUPON or YOUR NAME AND ADDRESS WITH to

INTERNATIONAL SPORTING INDUSTRIES

GENTLEMEN: Here is Rush my color brochure to me. I am interested in an I.S.I. BODY to fit a

PLEASE PRINT


NAME _____
 ADDRESS _____
 CITY _____ ST. _____ ZIP _____

NEW SCAT-TACH

Illuminated and Transistorized


UNDER \$

RETAIL

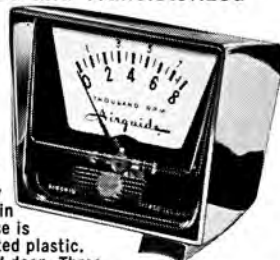

Complete, ready to install. Built-in transmitter. Case is chrome-like plated plastic. 3 1/8" wide, 2 3/4" deep. Three models: 4, 6 and 8 cyl. 0-8000 r.p.m. Works on both 6 and 12 volt, neg. or pos. ground, transistor and regular ignition. At speed shops, auto stores. Write for info. Jobber and dealers invited.

Mounts in any location



AIRGUIDE INSTRUMENT CO.



TURNER GT
 FORD CORTINA POWERED SUPER SPRINT

Offering the car connoisseur a completely new concept in auto power and styling. Designed and executed to suit the needs of the man who seeks the finest driving specifications. Test drive the new Turner—you're on the road in a truly great sports car!

FERGUSON AUTOMOTIVE INTERNATIONAL

HANDLING CONTINUED

A better solution is to maintain the required vertical rate for ride but increase the roll rate. This can be done by adding a torsion bar between the mass and the front wheels so that it twists in roll but does not twist when both wheels hit a bump together (Figure 24.) This is called a stabilizer bar.

The stabilizer bar doesn't affect the ride when both front wheels move up and down over bumps and undulations together, but it does affect the ride if only one wheel hits something like a bump or a pot hole. For this reason, there's a limit to the roll stiffness that's tolerable with a stabilizer bar. Furthermore, an excessively heavy stabilizer bar will result in "road wander"—the car will tend to follow the lateral undulations of the road surface.

Now let's talk about roll centers. Roll centers are points, determined by suspension geometry, about which the car tends to rotate when subjected to a side force. You can understand how roll center heights

affect the dynamic force transfer by looking at the forces acting on an axle. For simplicity, we will consider a schematic vehicle having solid front and rear axles as shown in Figure 27, although the discussion applies to independent suspensions as well.

An imaginary line connecting the roll centers is called the "roll axis". In Figure 27, it's shown as a shaft connected to the axles by bearings at the roll centers so that it's free to rotate. The mass of the car is represented by a ball attached to the roll axis at the location of the center of mass (center of gravity) which is above the roll axis.

When centrifugal force, due to cornering, acts at the center of mass (as in Figure 28), it tends to rotate the mass about the roll axis. This compresses the springs at the outside, increasing their load, and relaxes the springs at the inside causing their load to decrease. In addition, there are side forces at each of the roll centers whose resultant

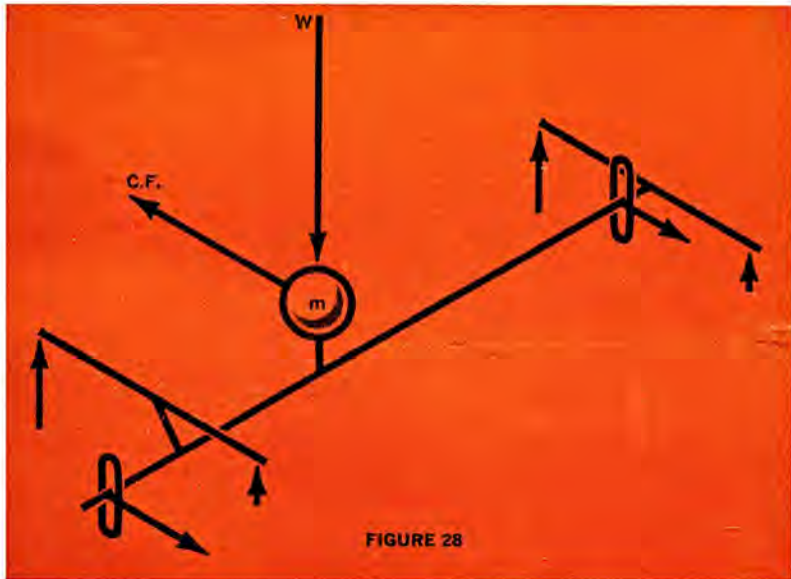


FIGURE 28

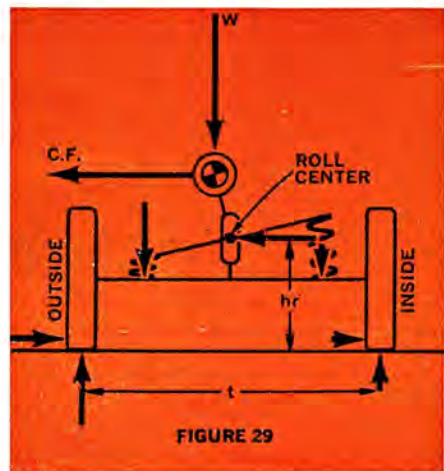


FIGURE 29

forces balance the centrifugal force. The relative magnitude of forces at the front and rear roll centers depends upon location of the center of mass (static weight distribution).

Consider the forces acting on a single axle, as shown in the diagram in Figure 29. We have unequal spring forces which load the outside wheel more than the inside. We also have a side force at the roll center which is resisted by tire side forces located at the ground. If the roll center is above the ground, we have a transfer of vertical load from the inside wheel to the outside wheel, as described earlier. The magnitude of this force transfer depends upon the ratio of roll center height to tread width (h_r/t), and also on the magnitude of the force.

Thus, there are two ways that an axle can experience dynamic force transfer. First, due to roll of the vehicle and the resulting change of spring loads, and, second, due to a side force acting at the roll center.

The relative significance of these

two phenomena depends upon the height of the center of mass relative to the roll axis. Study Figure 30: if one or both of the roll centers are raised so that the roll axis passes through the center of mass, centrifugal force—acting at the center of mass—will produce no rotation about the roll axis. Since the springs aren't affected by this, the dynamic force transfer will be due entirely to side forces at the roll centers. This effect will be relatively large because the roll centers have been raised.

On the other hand, if both roll centers are lowered to the ground so that the roll axis is on the ground (as in Figure 31), centrifugal force acting on the center of mass will produce a strong tendency to rotate it about the roll axis. This will cause correspondingly large changes in spring forces with resulting force transfer. However, the side forces at the roll centers, being at the ground, will produce no force transfer. Note that as one effect increases,

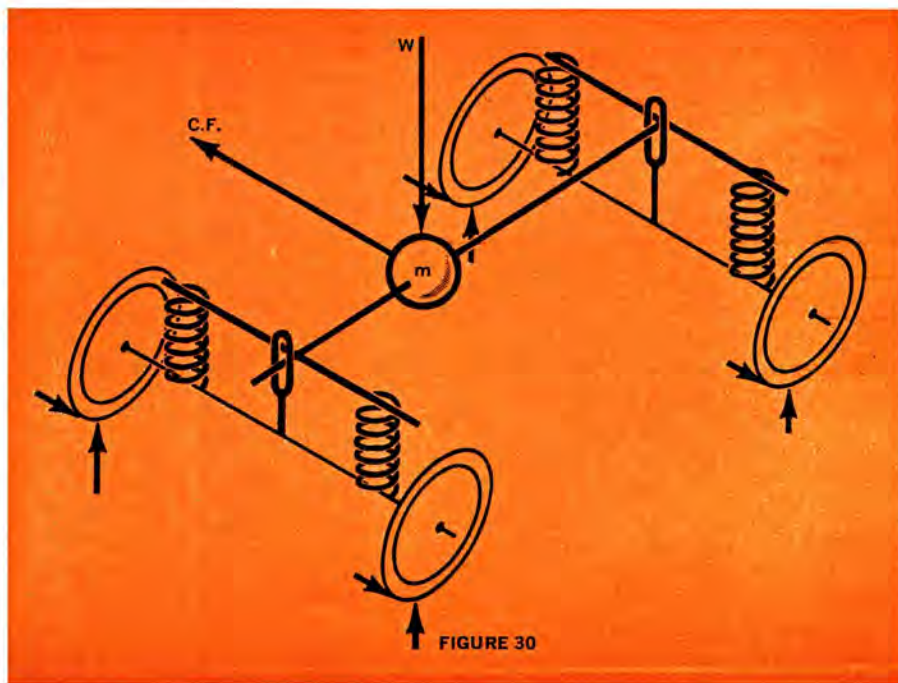


FIGURE 30



ISKY
RACING CAMS

The world's largest facility for camshaft design, testing and manufacturing.

Iskenderian is the world leader in the production of racing camshafts and coordinated valve gear assemblies. Dynamometer tests are conducted daily in our testing labs in our continuing search for developing increased power. IBM computers are used in developing new formulas such as the famous Isky Polydyne profile.

Leading European, as well as American, auto manufacturers have consulted with Iskenderian, and work in close alliance with Isky's experimental department to supplement their engineering staffs.

All Isky road and competition racing grinds are designed to improve your car's existing performance. No matter what type of car you have, there is probably an Isky cam and coordinated valve gear assembly available to give your car the desired extra power and performance.

New Advanced More Powerful Cams For Imported Cars



New all-out competition grind for the following engines: MG-A MG-B T-66 cam and co-ordinated assembly Volvo P-16 P-18 cam and co-ordinated assembly Triumph TR-2-3-4 TR-777 cam and co-ordinated assembly Datsun ZM-66 cam and co-ordinated assembly Alfa Romeo D. O. H. C. ZM74L grind only Sprite and Midget MM-66 cam and co-ordinated assembly Daimler V8 C-65 grind only and many more.



Write to: Technical Assistance Dept. for specs and prices. Send ten cents for Imported Car Supplement or for big new 72 page 1965 catalog.

ED ISKENDERIAN
RACING CAMS



20 PIECE SUPER SOCKET TOOL KIT

**Ideal for
HOME
CAR
SHOP
HOBBY
OFFICE
etc.**



**WITH
REVERSIBLE RACHET,
UNIVERSAL HANDLE**

Wide range of sockets and screwdriver bits for screws, bolts, nuts with square, hex, slotted or recessed heads.

Complete with offset and double offset adapters, awl point, etc.

Handsome packaged in a specially designed storage box.

Mail Today!

CONSUMER SERVICE COMPANY

Enclosed is \$_____ for _____ Socket Tool Kits at _____ ea. plus _____ ea. for postage and handling (N. Y. C. residents please add 4% sales tax.) Foreign orders _____ additional.

Name _____ (PLEASE PRINT)

Address _____

City _____ State _____ Zip Code _____
Sorry—No charges or C.O.D. orders. CD-55

HANDLING CONTINUED

the other decreases. Actually, their total must be the same in every case.

The roll couple distribution is influenced by the manner in which force transfer is transmitted to the wheels. That portion which is transmitted by the springs is distributed according to the relative stiffness of the front and rear suspensions in roll, which is influenced largely by ride requirements. This was covered in detail earlier. The portion which is transmitted by side forces acting at the roll centers is distributed according to the mass distribution (static weight distribution), and the heights of the roll centers.

In summary, due to the influence of "mass" distribution and the inevitable dynamic force transfer on tire deflection, the engineer utilizes some degree of all the design variables significant to vehicle behavior under the influences of side forces.

1. Vehicle Proportions
 - a. ratio of height of center of mass to tread.
2. Tire Design
 - a. structure, b. pressure, c. rim widths, d. tread, e. compound.
3. Suspension Design
 - a. Roll steer 1. toe change, 2. camber change.
 - b. Roll couple distribution, i.e. ratio of front and rear spring rates (a) Vertical spring rate,

(b) roll spring rate.

I think that does it. These are known elementary physical relationships, used by the automobile designer to achieve the desired handling characteristics for a given automobile. No new natural laws have been discovered, but a lot's been learned about their specific application since those hairy adventures with rear-engined high performance cars back in 1934. The best evidence is the whole rear-engine revolution in race car design, and the fact that we've seen more and more successful rear-engined passenger cars on the street in the last ten years. There is little question that more will follow.

Last month, we set out to discuss the fundamentals of automotive behavior, and that's what we've done. I'm not real keen on getting into any specific details of the arrangements on the Chaparral, and that's why we've kept it basic. We're not deliberately holding back any information. However, the way we've applied these fundamental principles to the Chaparrals is going to be our secret. There are quite a few people building race cars who have their own notions about all this, and I'm not about to write a set of specifications for their equipment. The racing business is plenty tough enough the way it is. *c/d*

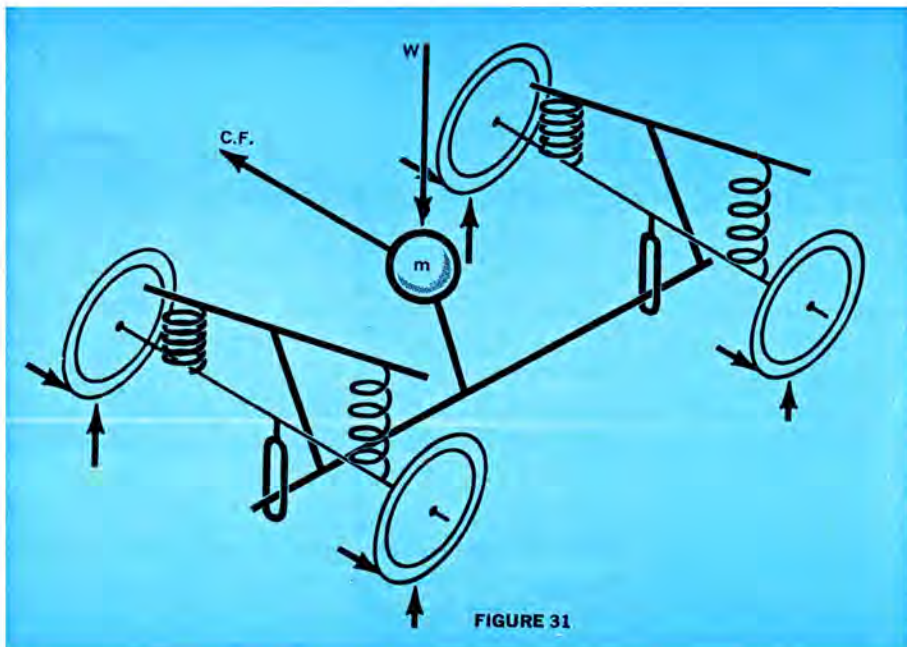


FIGURE 31